

Location of the Dip Switches and How to Change them:

1. Locate the Ventilation Holes on the top of the unit. (see Figure 1)
2. Within the Ventilation Holes, there is a small Slit. (see Figure 2)
3. While looking in the Slit is the location of the Dip Switches. (see Figure 3)
4. The Dip Switches can be changed WITHOUT having to remove the cover.
5. A small screwdriver or other such tool can be used to flip the Dip Switches into the correct configurations as instructed by a tech or troubleshooting forums. (see Figure 4)

Figure 1



Figure 2

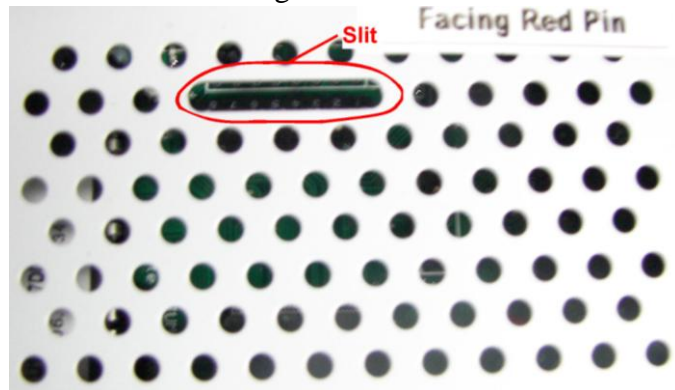


Figure 3

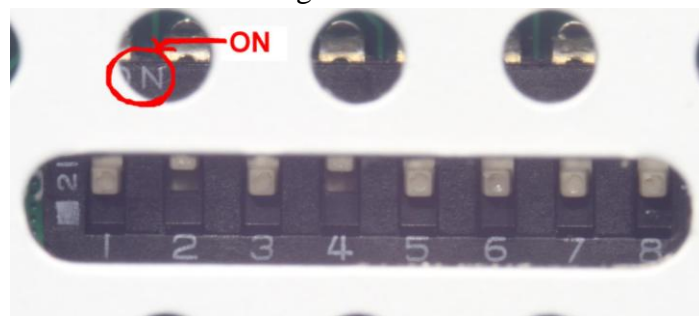


Figure 4



(Dip Switch Settings Vary-ask a tech for correct settings)

If you need further assistance, please visit our forum posts:
www.plrelectronics.com/forum/ Or email us at:
sales@plrelectronics.com