





# Installer Manual.

## Contents

1. Share Folder Setup
2. Installation
3. Additional features

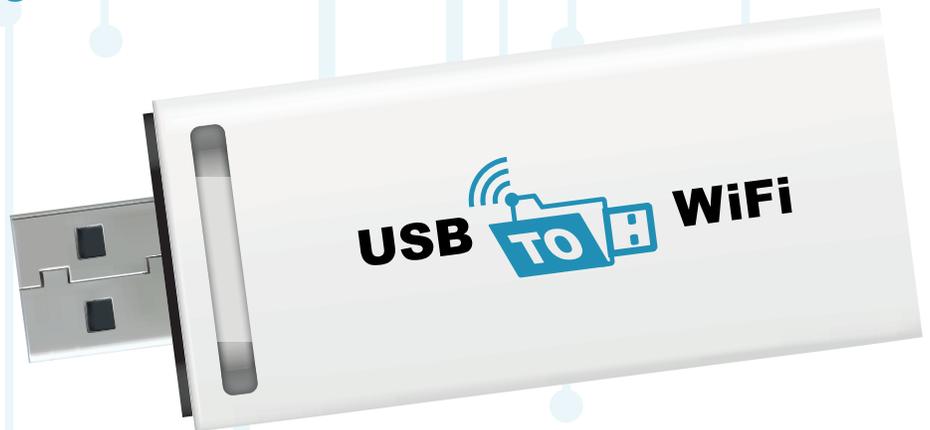


# 1 Share Folder Setup

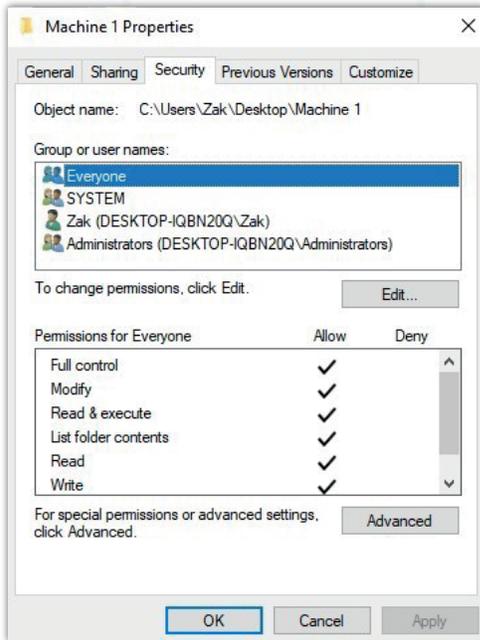


- On your PC, create a new folder with your desired folder name


- Right click your newly made folder and go to properties, select Security/Edit/Add. Under object names enter, Everyone. Enable full control in Advanced menu.

- Turn on SMB 1.0 in your windows features.

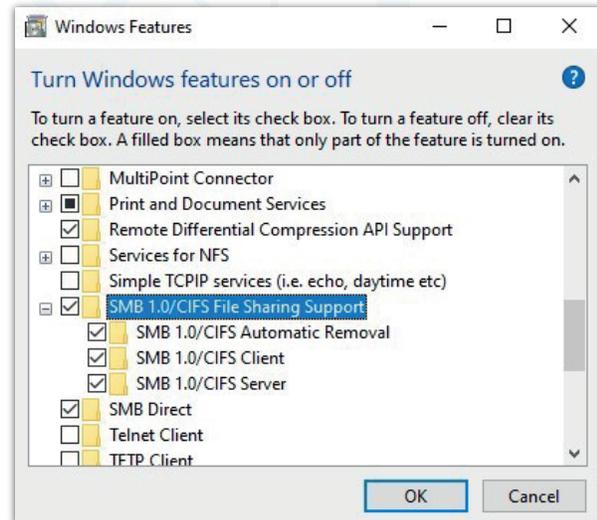

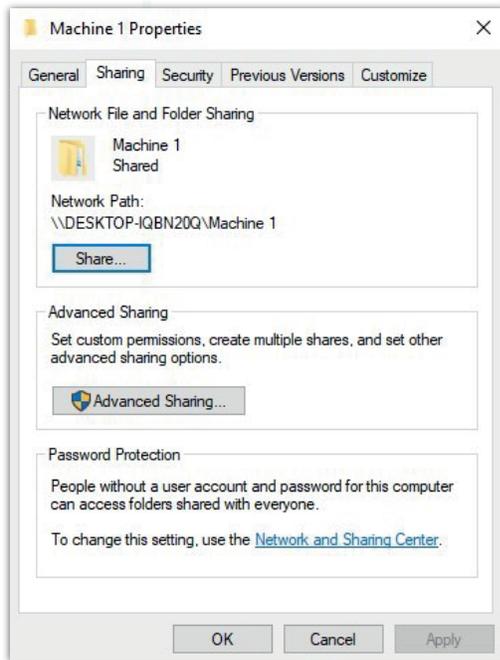

- Right-click your folder and select properties, select sharing. Enable Share this folder in both Share, and Advanced share, enable all permissions.

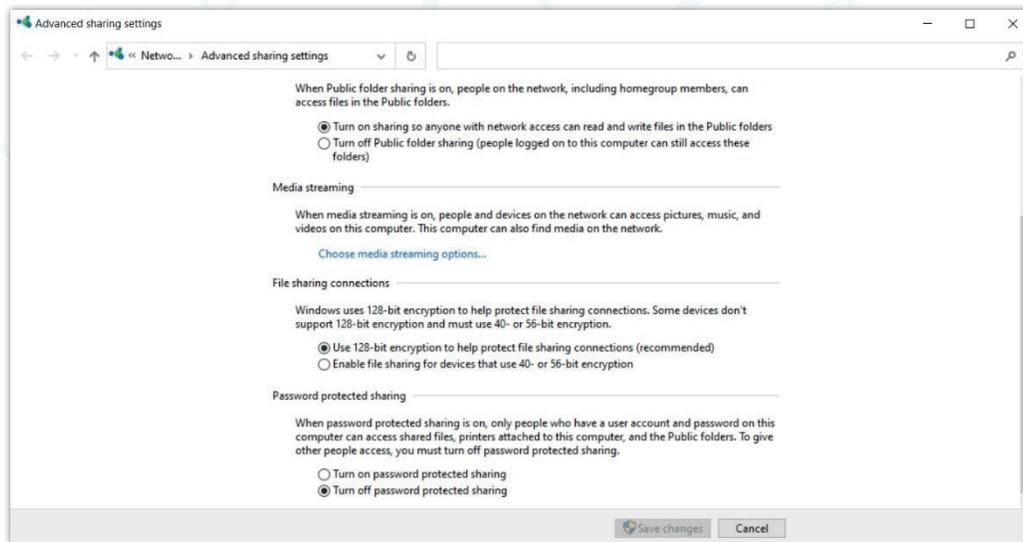



- While in Properties under the Sharing tab, select Network and Sharing Center. At the very bottom will be an option for Turn off password protected sharing, select it

# 2

## Installation

Here is how to use the USB2WiFi basic installer

This is the landing page for the basic installer

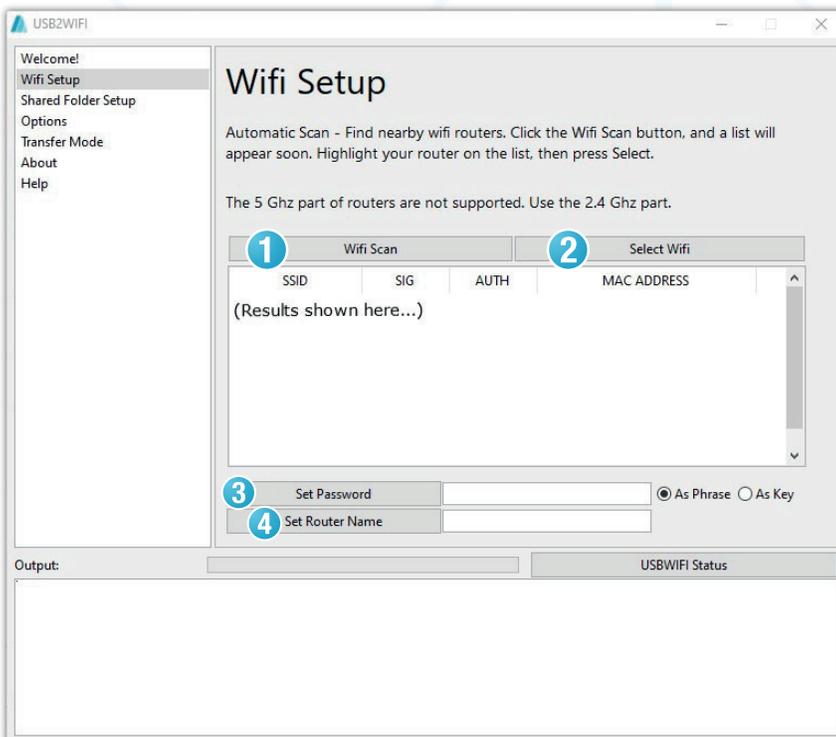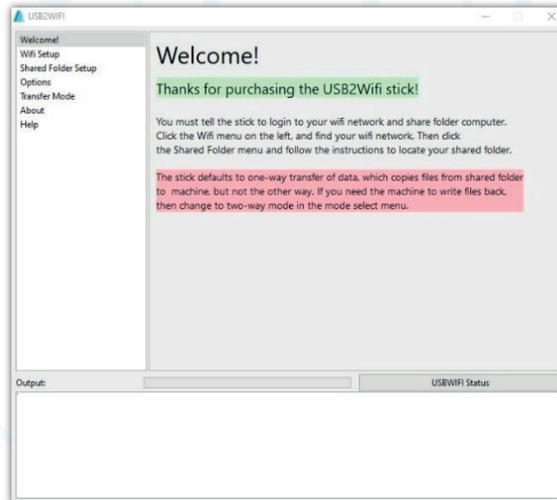

Select **1 Wifi Scan**

Select on the SSID of the router you will be pairing and click **2 Select Wifi**


Enter your WIFI's password into the text box next to **3 Set Password**. Then click **3 Set Password**.

Next Select **USBWiFi Status** to see the results of your inputs

# 2

## Installation

Here is how to use the USB2WiFi basic installer

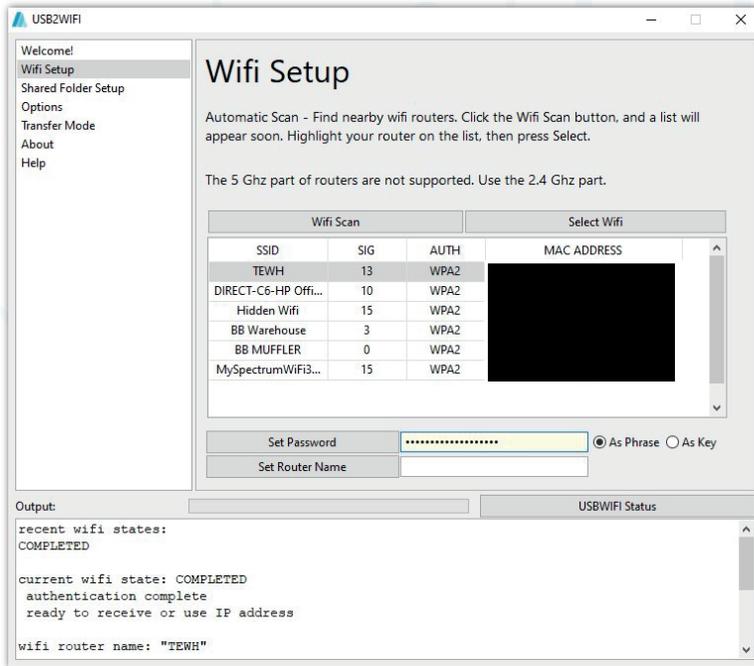

Now that the network is paired and tested, lets begin pairing to our Share Folder. Select Shared Folder Setup


\*This would be an example of a successful pair with user's WiFi

Begin with **1 Basic scan**, if you have trouble detecting your folder with the **1 Basic Scan**, confirm that your not on a 5GHZ network as the USB-To-WiFi is not compatible with 5GHZ routers.


Use **2 Full Scan** to scan for every Device and Share Folder on your network.

Results will be printed once the USB processes the command. Highlight your desired share folder and press **3 Select** to set the folder to be paired.

After pairing to your desired folder, click **4 Test Share Folder** so you may confirm pairing with the Share Folder

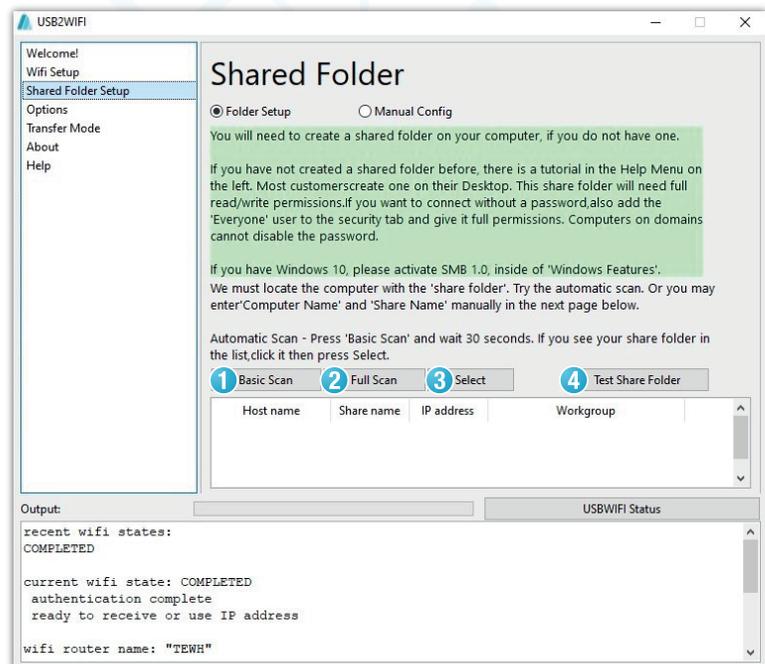

# 3 Additional Features

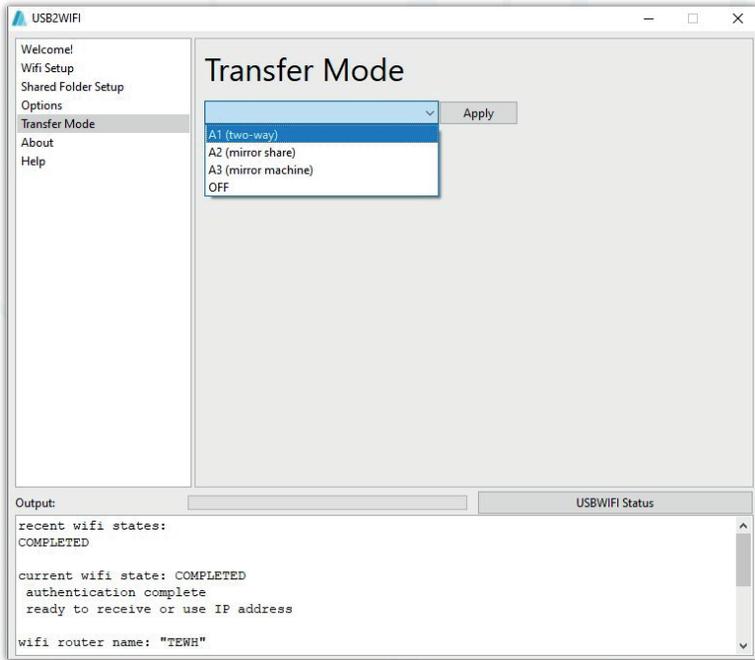


## Transfer mode

Here are the 3 listed methods of transfer.

- A1 will be used to share files between Machine and Folder.
- A2 Will have the USB mirror the share folder, and will not send files from the machine.
- A3 Will mirror the machine and will not send files from the share folder

## Options

Detach Time refers to the amount of time the USB takes to boot up after being inserted into the USB port. The number you will enter will be in milliseconds. 9000ms would be 9 Seconds. Useful for older machines having trouble detecting the device.

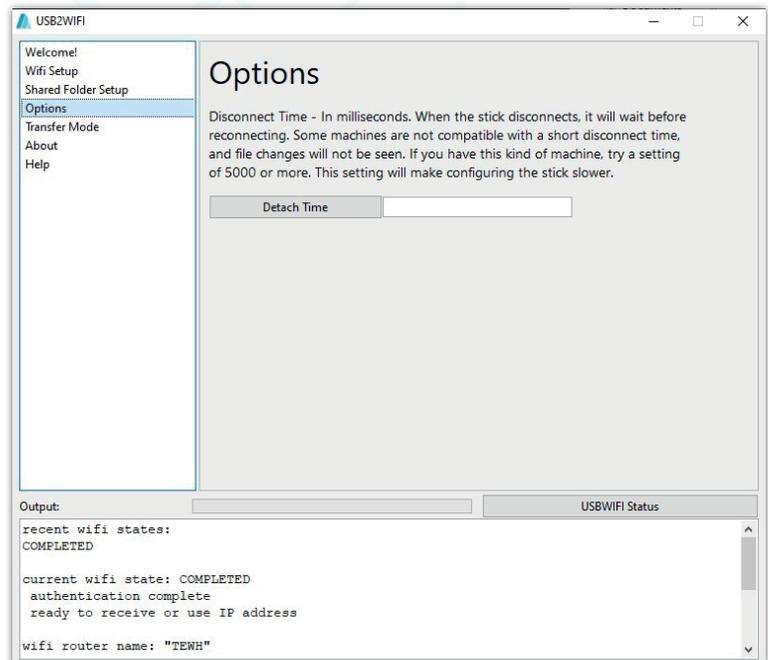

Thank you for choosing the USB-To-WiFi adapter to enhance your embroidery machine experience. If you have any questions or need further assistance, our customer support team is always ready to help.



## Contact Us

[www.PLRElectronics.com](http://www.PLRElectronics.com)  
[Info@PLRElectronics.com](mailto:Info@PLRElectronics.com)  
817 405 3449

## Follow Us

